



CodeRed

Chubb

FIRE ALARM MONITORING SERVICES

TEST MODE

To disable communication to DFES Communication Centre

Step 1: Place the iButton onto the reader for 3-4 seconds.

Step 2: Display will show Testmode 240m



The ASE will automatically exit Test Mode 4 hours after entering Test mode, unless manually returned to normal mode 'AS1670.3-2018'

F1 – Not in Use

Comms Path 2 – Not in Use

RETURNING THE ASE BACK TO NORMAL MODE

To enable communication with DFES Communication Centre

1. Reset all Alarms on the Fire Indicator Panel (FIP).
2. Press the F2 button for 1-2 seconds on the ASE to clear "ALARM STATUS" Alarms that are in the ASE memory.
3. Place the iButton on the reader for 3-4 seconds to change the ASE from the Test Mode to the Normal Mode "AS1670.3-2018".

Removing the ASE from the Test Mode with active Alarms will call the Fire Brigade!

FOR ASSISTANCE PLEASE CONTACT
FIRE ALARM MONITORING SERVICES 24/7 ON:

1300 793 722